

Fig.2 System construction of material identification device

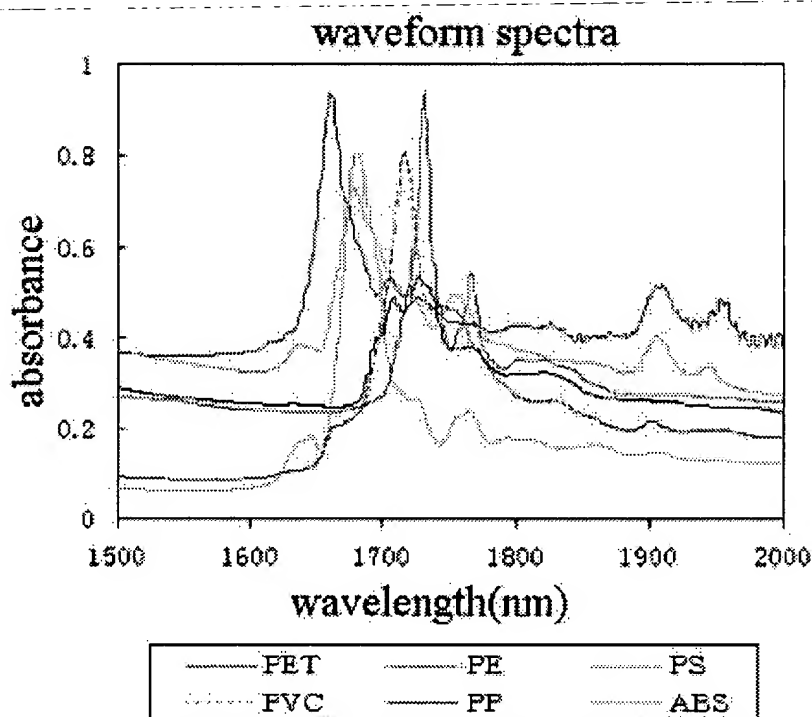


Fig.3 Waveforms of various plastics

(1) Material identification

High speed and high accuracy identification of plastics by irradiating with near-infrared light for PE, PP, PET, PS, PVC.

(2) Color identification

Various colors of PET bottles can be identified as transparent, blue and green bottles, or transparent bottles and colored bottles.

(3) Metal detector

Metallic caps entrapped with the plastic bottles can be detected and deleted.

Following separation schemes are possible with the separator.

Identification device	identification
only material	example: PET, PVC, and others
material+color	example: transparent PET, colored PET, PVC, and others
material+color+metal detection	example: transparent PET, colored PET, metal capped bottles, PVC

Ishikawajima-Harima Heavy Industries Co., Ltd.
2-2-1, Otemachi, Chiyoda-ku, Tokyo 100-8182 Japan
TEL +81-3-3244-5353
FAX +81-3-3244-5136
<http://www.ihl.co.jp>

[Contents](#)[Search by Keywords](#)[Other Databases](#)[GEC Homepage](#)



Japanese Advanced Environment Equipment

Waste Treatment and Recycling Equipment > Crushing Resource Recovery and Recycling Equipment > Classification and Resource Recovery Equipment

Automatic Separator for Plastic Bottles

1. General description

Collected plastic bottles of various shapes are to be sorted according to the plastic species of the bottles for recycling to be practical. Thus, "The automatic separator for plastic bottles" can separate plastic bottles according to plastic species at high speed for assisting recycling of the bottles. The separator can be modified by adding special capabilities like separation according to color of PET bottles and to the presence of metallic caps on the bottles. Maximum separation capacity: 0.4 t/h, (with a slight change depending on bottle shapes and charging conditions)

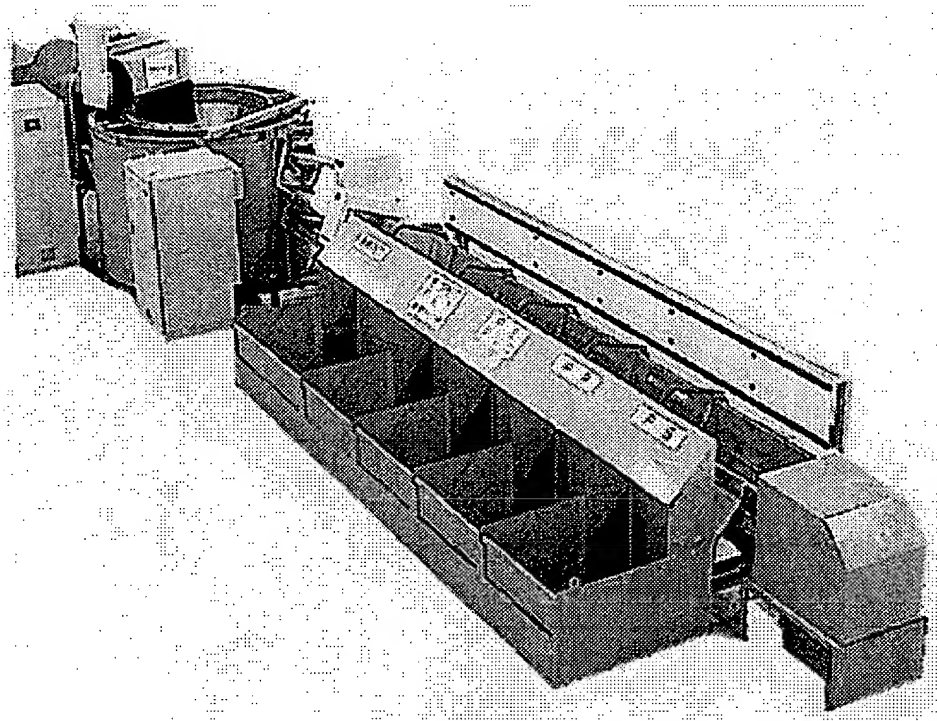


Fig.1 Automatic separator for plastic bottles

2. Principles of material identification

The system construction of the identification device is shown in Fig. 2. Here, a halogen lamp is mounted on the device to illuminate near-infrared light on incoming plastic bottles. The bottles absorb the light at different wavelength according to the species of the plastic bottles as illustrated in Fig. 3. Thus, every reflected near-infrared light is analyzed for the absorption characteristics to identify the plastic species. Identification capabilities are listed below including material identification.